


Riser Isolators & Supports



Riser Anchors

- Each pair of EFRA(H) Riser Anchors provides high frequency noise and vibration isolation for those locations where movement must be controlled.
- When the anchors are attached to piping as shown in the illustrations below, all expansion will be directed from this point.
- Anchors are always used in pairs.

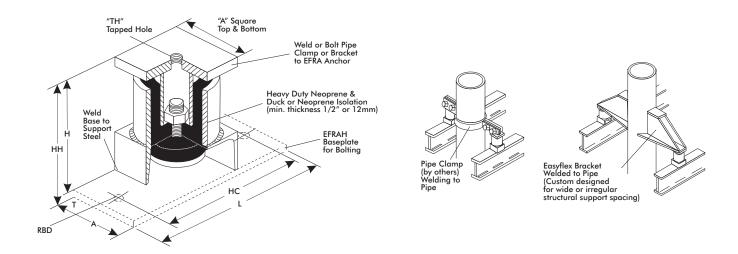

Type EFRA and EFRAH Dimension (mm)

Туре	Size	Α	Н	L	T	HC	НН	RBD	TH
EFRA-	75 200	75 100	112 175	150 275	6 9	212	184	9 15	16mm
EFRAH-	350 600 800	* 225 275	180 275 337	300 362 437	12 18 25	237 300 362	193 293 362	18 31 37	None None None

RBD-Required Bolt Dia. for Max. Loading

Change designation to EFRAH when base plate with bolt holes is required.

Type EFRA and EFRAH Ratings

Tuno		C.	Anchoring Cap	Rated Defl		
	Туре	Size	(lbs)	(Kg)	(In)	(mm)
		75	1000	453	0.1	2.5
	EFRA-	200	6000	2722	0.1	2.5
		350	24000	10886	0.1	2.5
	EFRAH-	600	60000	27216	0.1	2.5
		800	100000	45359	0.1	2.5

^{*}Size 350 – Top is 5" 125mm x 5" 125mm, Bottom is 6" 150mm x 6" 150mm.